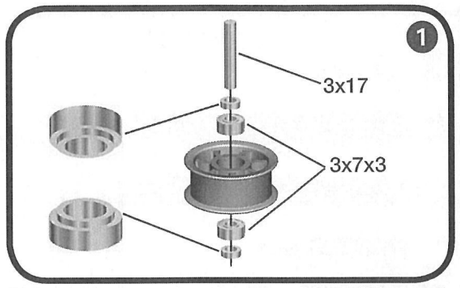

Before you combine the two sides of the main frame, attach the two belt tensioners (#4089, bag 6).

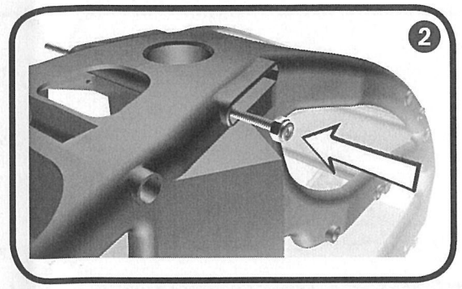

Using the rod M2.5x60 from bag 7, position all 14 nylon nuts in the right side frame.

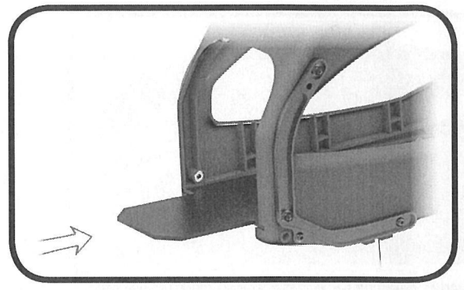

After assembling the chassis. please move the battery plate in to the frame.

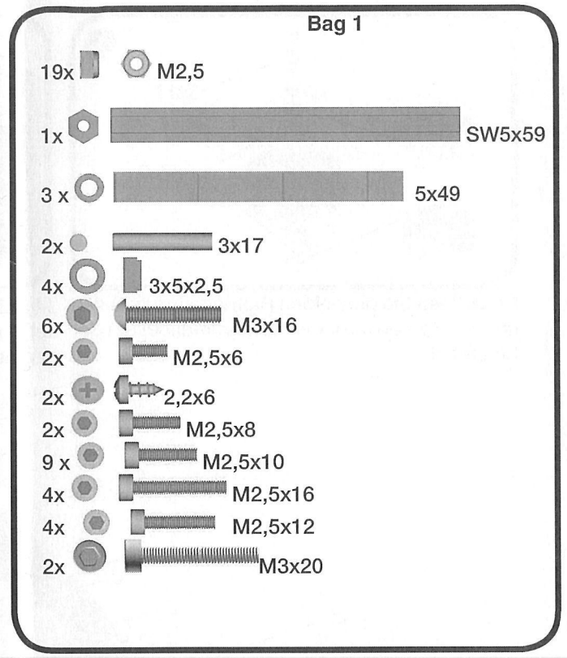

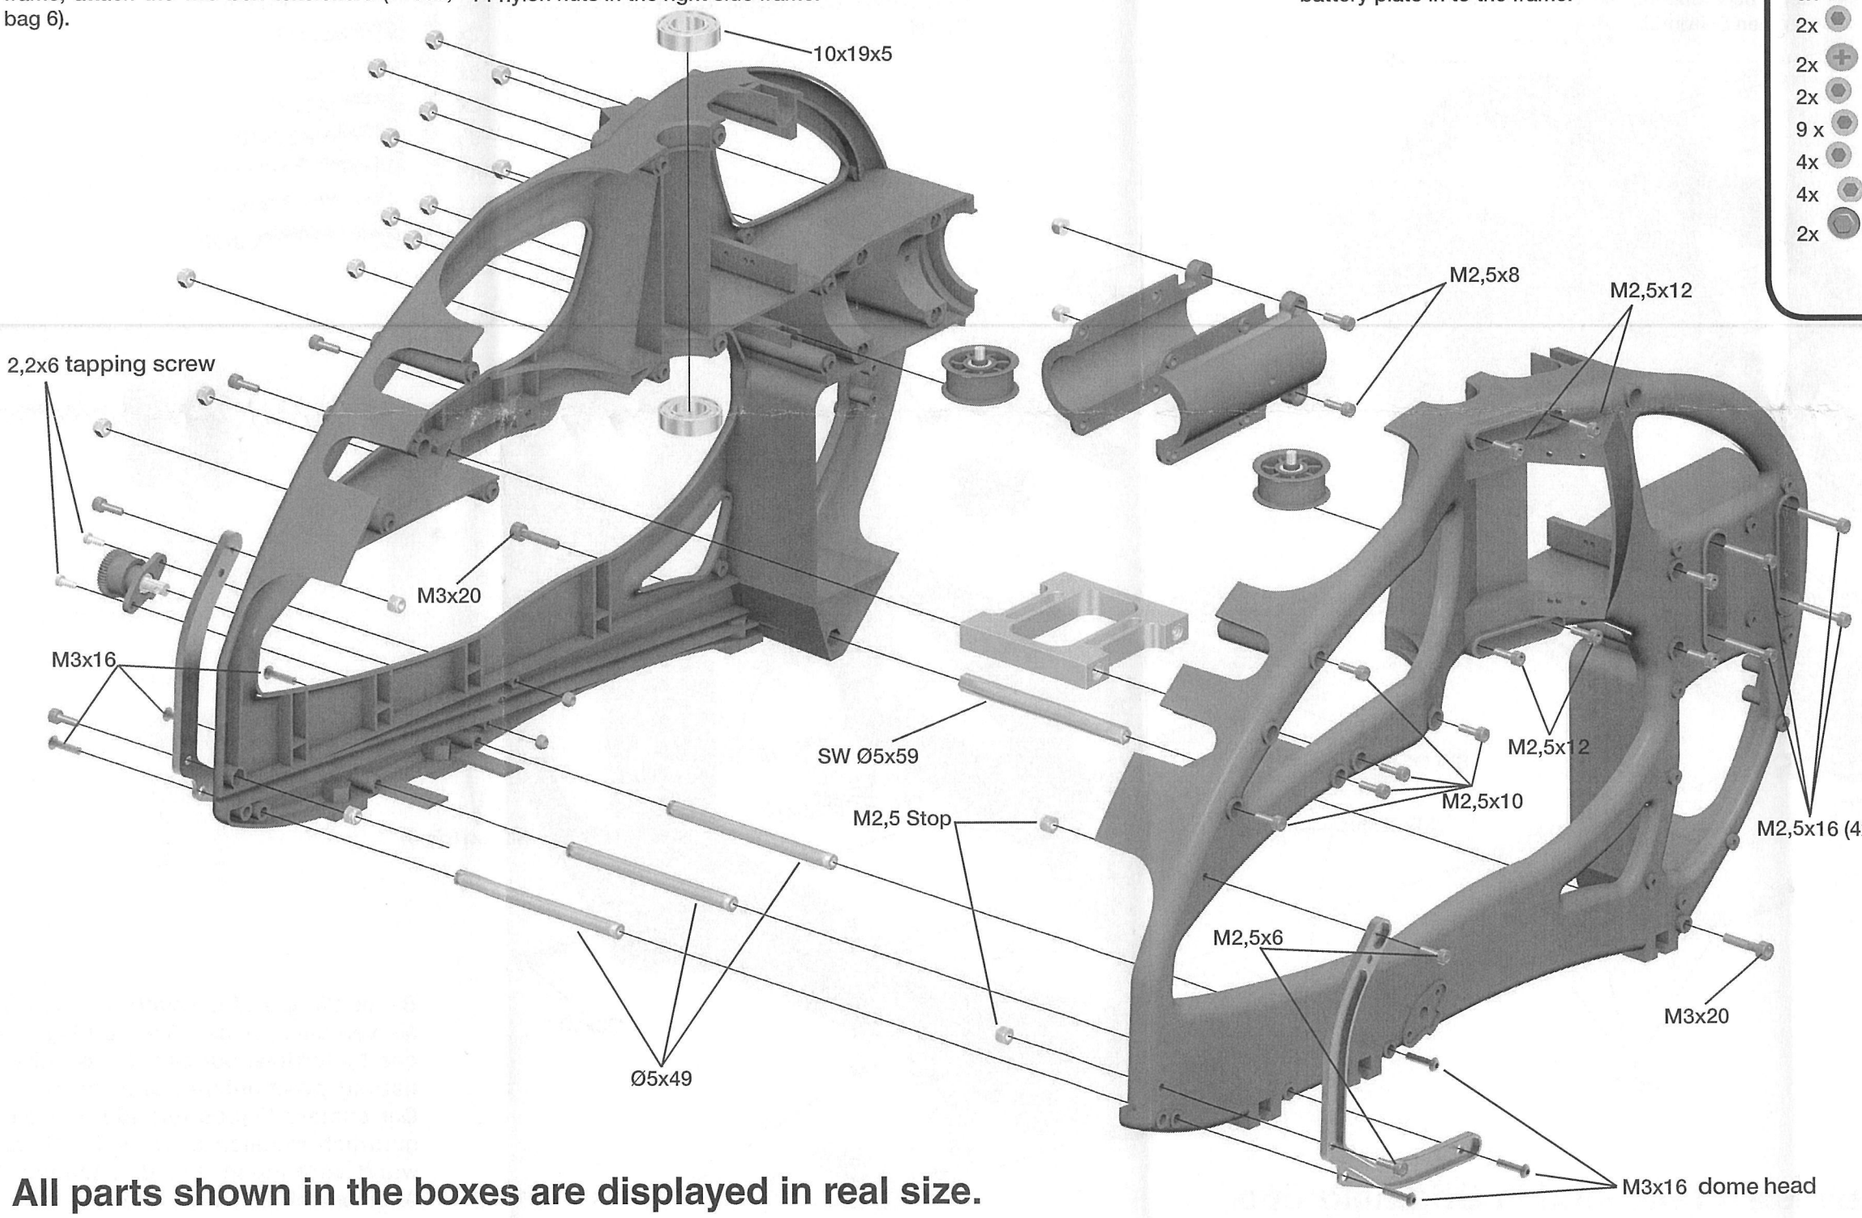

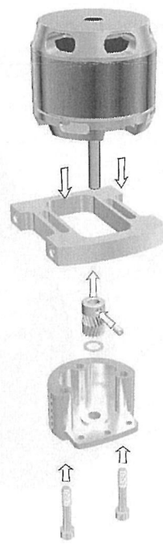

You should position the motor pinion on the motor shaft, before you mount the motor plate. You may also mount the motor pinion at a later stage, but the process will be more cumbersome. For reading on how to mount the motor pinion, please flip to page 9.

All parts shown in the boxes are displayed in real size.

LOGO 500/550 Chassis upgrade #4925

Beutel 1

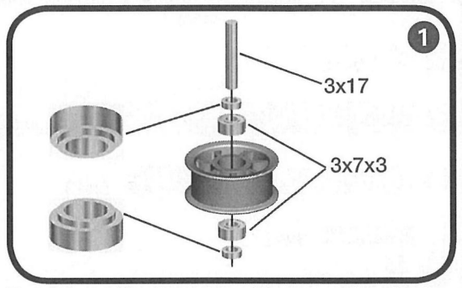

Befestigen Sie die beiden Riemenandruckrollen (#4089, Beutel 6) vor dem Zusammensetzen der Seitenteile.

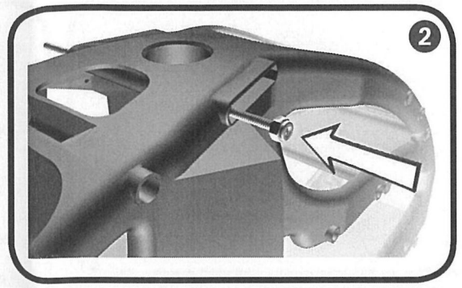

Mit Hilfe der Gewindestange M2,5x60 aus Beutel 7 positionieren Sie alle 14 Stopmuttern im rechten Seitenteil.

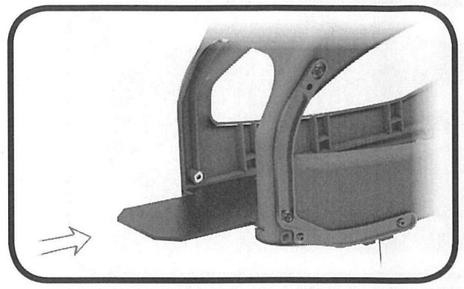

Nachdem das Chassis komplett montiert ist, schieben Sie die Akkuplatte von vorne in das Chassis.

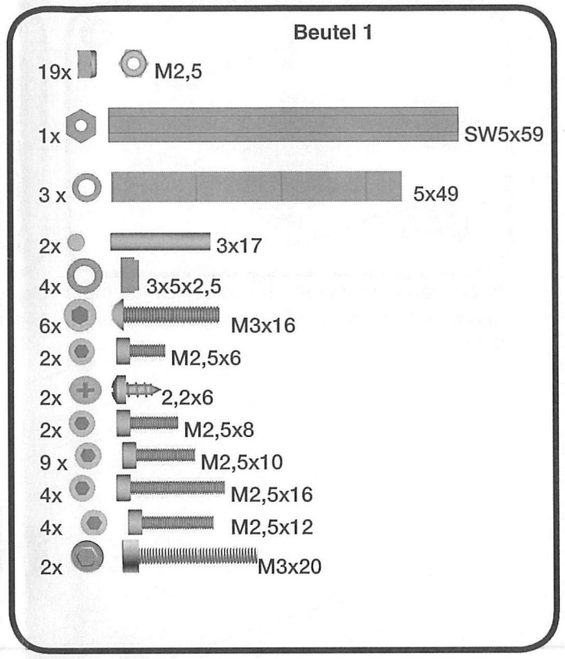

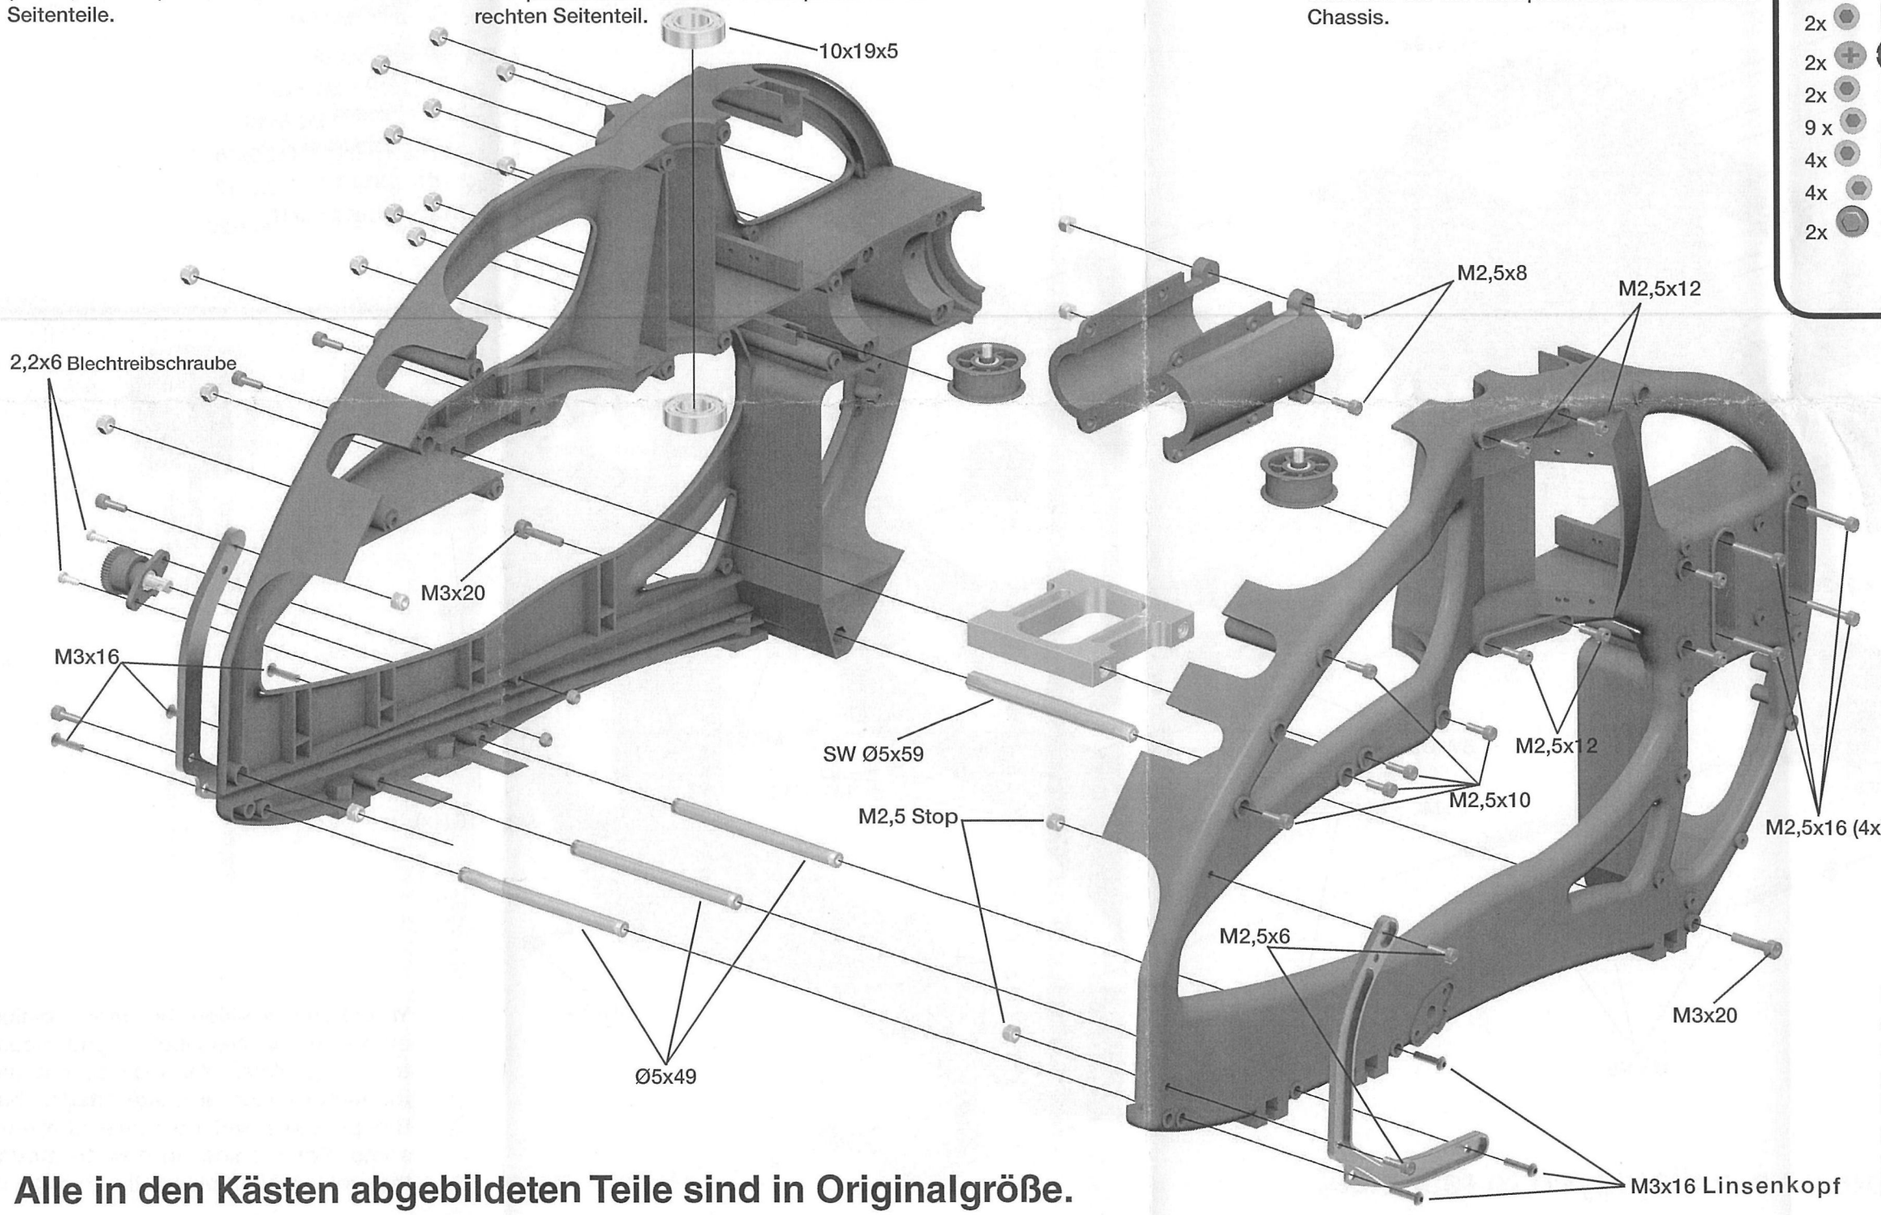

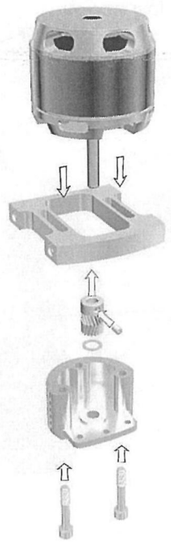

Bevor Sie die Motorplatte in das Chassis verbauen, haben Sie die Möglichkeit das Motorritzel auf der Motorwelle genau zu positionieren und zu fixieren. Der spätere Einbau des Motorritzels ist natürlich möglich aber mit Mehraufwand verbunden. Für den Einbau des Antriebritzel gehen Sie bitte auf Seite 9.

Alle in den Kästen abgebildeten Teile sind in Originalgröße.